



Bosch Smart Home

# Motion Detector Instruction Manual



**BOSCH**

## Start making your home smart!

Please be sure to install the Bosch Smart Home Controller first.

 


Ensure that you have a Bosch Smart Home Controller and the Bosch Smart Home App, and that you have set both of them up successfully.



You can also use the explanatory video on our website to help you install your Bosch Smart Home Motion Detector more easily:  
**[www.bosch-smarthome.com/installation](http://www.bosch-smarthome.com/installation)**

## Set up your product in just three steps

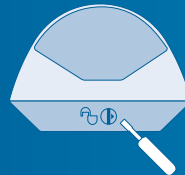

► **Separating the housing and mounting bracket**



► **Start the Bosch Smart Home App and select “Add device”**



► **Scan the QR code and follow the instructions**



## **Dear customer,**

Congratulations on purchasing your Bosch Smart Home Motion Detector. It will help you to make your home even safer and smarter. It reliably detects movement using passive infrared technology, an additional temperature sensor and an intelligent algorithm. Thanks to the integrated pet immunity function, false alarms triggered by pets weighing up to 25 kg can easily be avoided. The Bosch Smart Home App immediately warns you in the event of unauthorized entry into your home or if the Motion Detector is tampered with. The Motion Detector is quickly integrated into your system via the Bosch Smart Home Controller.

**We hope you enjoy your new product,  
The Bosch Smart Home Team**

## TABLE OF CONTENTS

<b>1.0 Product description</b> .....	<b>08</b>	<b>4.0 The motion detector</b> .....	<b>14</b>	<b>6.0 Fixing</b> .....	<b>23</b>	<b>7.0 Functional test</b> .....	<b>42</b>
1.1 Intended use .....	09	4.1 Product overview.....	14	6.1 Fixing instructions.....	23	<b>8.0 Product details</b> .....	<b>43</b>
<b>2.0 In the box</b> .....	<b>10</b>	<b>5.0 Installation and setup</b> .....	<b>18</b>	6.2 Choosing the type of fixing .....	28	8.1 Technical data .....	43
<b>3.0 Warning notices</b> .....	<b>12</b>	5.1 Separating the housing and fixing bracket .....	19	6.3 Corner fixing with screws .....	30	8.2 Declaration of conformity .....	45
3.1 Explanation of symbols .....	12	5.2 Starting the app and scanning the QR code .....	20	6.4 Corner fixing with adhesive tape .....	32	8.3 Faults in radio operation.....	46
3.2 Safety instructions .....	13	5.3 Inserting the battery compartment .....	21	6.5 Wall fixing with screws.....	34	8.4 Environmental protection and disposal .....	47
		5.4 Configuring the device.....	22	6.6 Wall fixing with adhesive tape....	36	<b>9.0 Further information</b> .....	<b>48</b>
				6.7 Selecting pet immunity or sneak-by guard .....	38		
				6.8 Inserting the Motion Detector into the mounting bracket.....	41		

## 1.0 PRODUCT DESCRIPTION

The network-enabled Motion Detector with passive infrared technology (PIR) is equipped with the following components:

- ▶ Lens with 7 x 11 segments
- ▶ 90° and 12 m detection range
- ▶ Sneak-by guard or pet immunity
- ▶ Theft protection
- ▶ One long-life, replaceable battery

The device reliably warns you in the event of unauthorized entry into your house or your apartment. The app provides information on the room and the time of the alarm.

## 1.1 Intended use

The product must only be used together with original Bosch Smart Home components, and is for indoor use only.

- ▶ Follow the safety instructions and the directions in this manual and the Bosch Smart Home App to ensure that the product is set up correctly

 
- ▶ Please note the details in the Technical Data section (see p. 43)

- ▶ Avoid installing in areas prone to high amounts of dust, direct sunshine or heat




Do not modify the product in any way. Any other use is considered unintended use. We will not assume liability for any resulting damage.

## 2.0 IN THE BOX

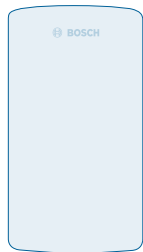


Motion  
Detector

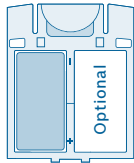 

Battery compart-  
ment with 1 battery



 4 adhesive tapes

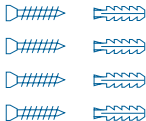

4 screws  
4 plugs



The scope of delivery includes a battery (123A) with a typical service life of around five years. For a longer service life, you can also insert a second battery into the battery compartment.



To operate the Motion Detector you will require the app, a Controller and an internet connection.

## 3.0 WARNING NOTICES

### 3.1 Explanation of symbols



#### **Warning.**

This alerts you to danger.



#### **Info.**

Indicates important information.

## 3.2 Safety instructions

 


#### **Proper handling of batteries**

- ▶ Take the batteries out of the device if it is not used for a prolonged period of time
- ▶ The enclosed batteries are not suitable for charging


## 4.0 THE MOTION DETECTOR

### 4.1 Product overview

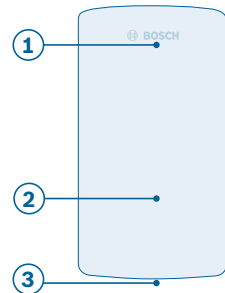


Item	Part	Explanation
<b>1</b>	LED indicator	Status/fault
	Red	Fault, functional test
	Orange	Configuration process, update
	Green	Configuration successful
<b>2</b>	Sensor area	With lens
<b>3</b>	Sneak-by guard	Increased security

 Motion Detector – front side of housing

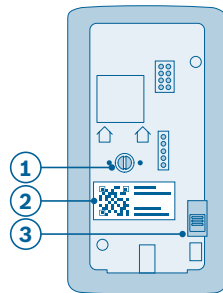


Item	Part	Explanation
<b>1</b>	Green rotary switch	For setting pet immunity/sneak-by guard
<b>2</b>	QR code	Scan for device identification
<b>3</b>	Contact switch	For device resetting and theft protection

 Motion Detector – rear side of housing

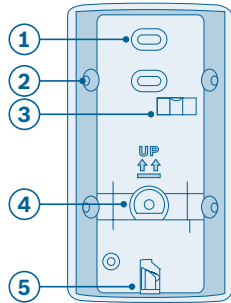

Item	Part	Explanation
<b>1</b>	Pre-punched holes	For wall mounting
<b>2</b>	Pre-punched holes	For corner mounting
<b>3</b>	Bubble level	Aid for alignment
<b>4</b>	Theft protection	Remains on wall in case of theft and sends signal
<b>5</b>	Turn lock	For separating the housing and mounting bracket

 Motion Detector – front side of mounting bracket

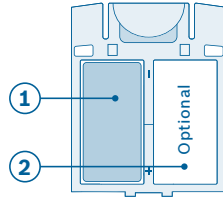

Item	Part	Explanation
<b>1</b>	Battery	One inserted 123A battery
<b>2</b>	Battery compartment with placeholder	Option for another battery

Motion Detector – battery compartment

## 5.0 INSTALLATION AND SETUP



 
### Before you start

Ensure that you have a Bosch Smart Home Controller and the Bosch Smart Home App, and that you have set both of them up successfully.




You can also use the explanatory video on our website to help you install your Bosch Smart Home Motion Detector more easily:  
**[www.bosch-smarthome.com/installation](http://www.bosch-smarthome.com/installation)**

## 5.1 Separating the housing and fixing bracket

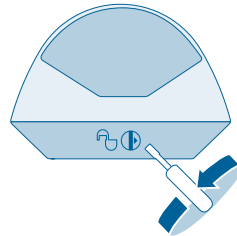

 Separate the Motion Detector's housing from the mounting bracket. To do so, use a screwdriver to twist the turn lock on the underside of the

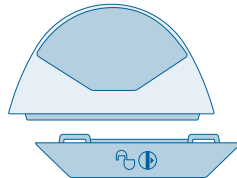


Motion Detector counterclockwise by 180°, and simultaneously pull away the housing from the mounting bracket.

## 5.2 Starting the app and scanning the QR code

 Now start the Bosch Smart Home App and select “Add device”.



From this point, the app guides you through the installation process. You will find a detailed description in this instruction manual.

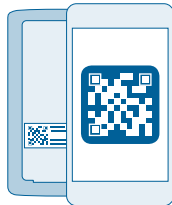


The app will prompt you to scan the QR code on the product. You will find the QR code on the back of the housing (see p.15).

## 5.3 Inserting the battery compartment

 Insert the battery compartment from above into the Motion Detector's housing. The LED will start to flash orange.



A battery is included in the scope of delivery. In order to double the service life, you can also insert a second battery into the battery compartment. To do so, remove the placeholder from the battery compartment.

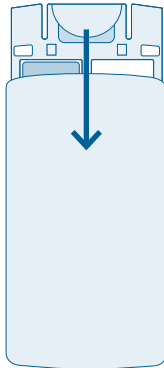

## 5.4 Configuring the device

As soon as the battery is inserted, the Motion Detector connects to the Controller. The Motion Detector's LED indicates the status of the configuration attempt using the following flash codes:

The app informs you if the configuration was successful.

LED state	Explanation
Flashes green once	Successful configuration attempt
Flashes red	Unsuccessful configuration attempt

## 6.0 FIXING

### 6.1 Fixing instructions

 


Prevailing regulations must be observed when installing the product. Failure to comply with the regulations can lead to material damage and/or physical injury.

- ▶ Check that the scope of delivery is intact. Only install parts that are in immaculate condition
- ▶ Observe the instructions regarding the installation location
- ▶ Pay attention to the direction of movement when installing (lateral motion detection)
- ▶ You can find more information in the online FAQs at:  
**[www.bosch-smarthome.com/faq](http://www.bosch-smarthome.com/faq)**

Observe the following mounting instructions:

- ▶ Mount the Motion Detector at a height of minimum 2.20 m to maximum 2.70 m, as desired
- ▶ The product has a detection range of 90° and 12 m
- ▶ In addition the sneak-by guard can be activated

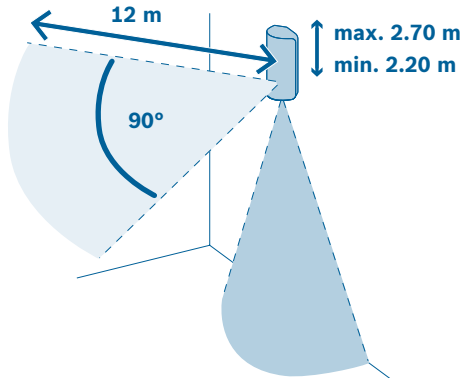

- ▶ There must not be any windows in the detection area of the Motion Detector
- ▶ Avoid direct or indirect sunlight in the detection area of the Motion Detector
- ▶ Do not block the detection area with objects

- ▶ Do not install the Motion Detector near rotating objects (e.g. fans) or independently moving objects
- ▶ Do not install the near sources of heat or cold



 
- ▶ Do not place any objects on which pets can climb in the detection area




- ▶ Place the Motion Detector in the part of the room which is most frequently walked through (e.g. near the door)

Take the Motion Detector to your chosen mounting location. **Before mounting**, use the app to perform a communication test in order to check the signal strength.


- ▶ The connection with the Bosch Smart Home Controller needs to be sufficiently strong (you can perform a communication test using the app)

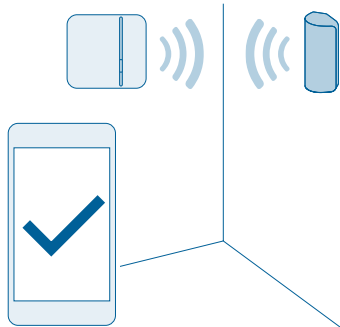

## 6.2 Choosing the type of fixing

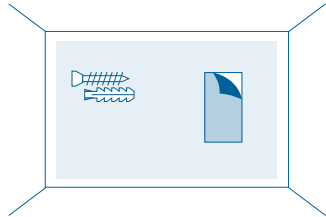 

 
The Motion Detector can be mounted in a corner or on a straight wall. In both

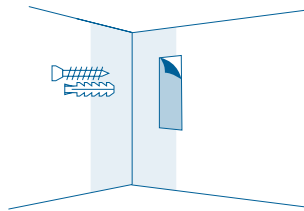


cases, you can either mount the device with screws or with adhesive tape.



 
The device's theft protection function can only be guaranteed if the Motion Detector is installed with screws.



 
If the Motion Detector is forcibly removed, the theft protection remains on the wall and emits a signal.

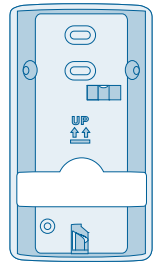

### 6.3 Corner fixing with screws

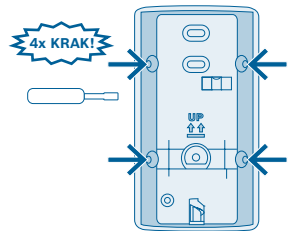 

 Punch through the four pre-punched screw holes in the Motion Detector's mounting bracket.

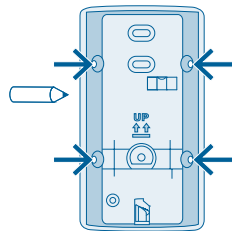


Hold the mounting bracket against the desired position on the wall and mark the drill holes.



When choosing a fixing location and when drilling, pay attention to potential electrical lines and/or supply lines that could be behind the wall.

 Mount the Motion Detector with screws and plugs.

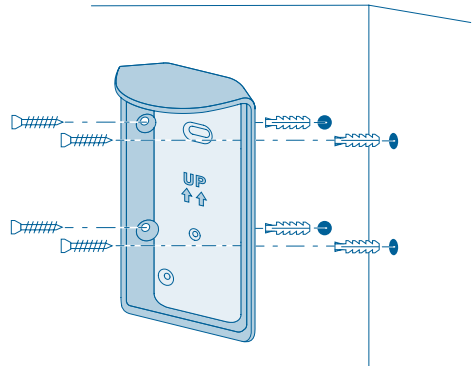


## 6.4 Corner fixing with adhesive tape




When fixing the Motion Detector with adhesive strips, the theft protection function cannot be guaranteed.

 
Attach the adhesive tapes to the beveled surfaces of the Motion Detector's mounting bracket and peel off the second protective film.

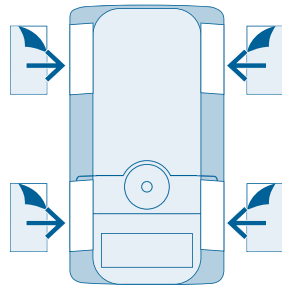

 
Place the Motion Detector in the desired position and press it down firmly.

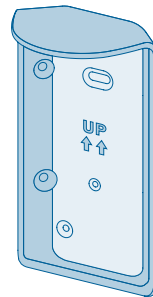

## 6.5 Wall fixing with screws

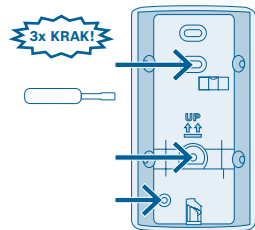 

 Punch through the three pre-punched screw holes in the Motion Detector's mounting bracket.

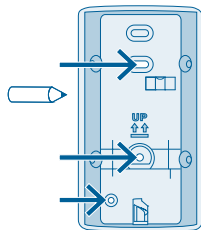


Hold the mounting bracket against the desired position on the wall and mark the drill holes.



When choosing a fixing location and when drilling, pay attention to potential electrical lines and/or supply lines that could be behind the wall.

 
Fix the Motion Detector using screws and plugs.

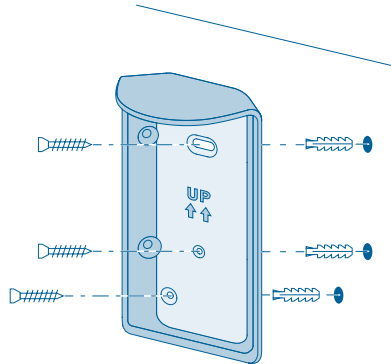

## 6.6 Wall fixing with adhesive tape



 
When attaching the Motion Detector with adhesive strips, the theft protection function cannot be guaranteed.

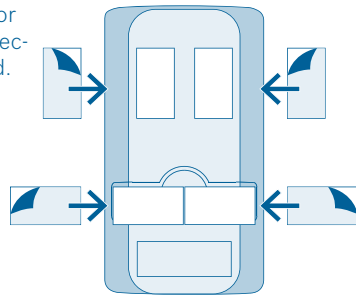

Attach the adhesive tapes to the back of the Motion Detector's mounting bracket and peel off the second protective film.




 Place the Motion Detector in the desired position and press it down firmly.

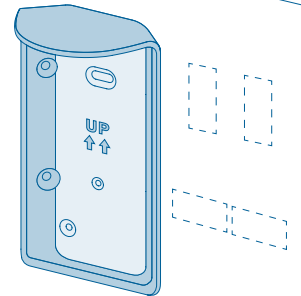


## 6.7 Selecting pet immunity or sneak-by guard

 
Set the desired sensitivity level on the Motion Detector. When doing so, you can choose between the pet immunity and sneak-by guard functions. Upon delivery, the product is set to pet immunity with the rotary switch on the rear side of the housing turned to the left. For the sneak-by guard, turn the rotary switch to the right.

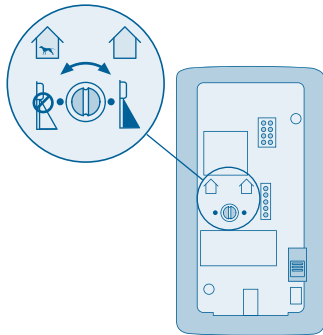

 If pet immunity is activated, small animals (< 25 kg) ignored by the Motion Detector's front sensor. The sensor directed downwards is then switched off. When pet immunity is activated, the sneak-by guard is deactivated.

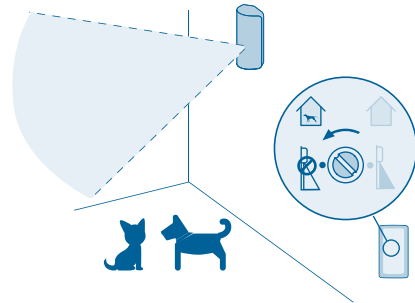


 When pet immunity is switched off, the sneak-by guard is activated, making it also possible to detect people who are beneath the Motion Detector. As a result, there is a possible risk of false alarms if you have pets.

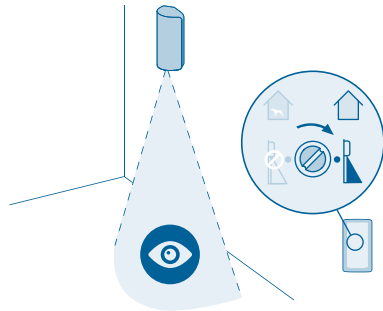

## 6.8 Inserting the Motion Detector into the mounting bracket

 Insert the Motion Detector into the mounting bracket from the bottom up until you hear it click into place.

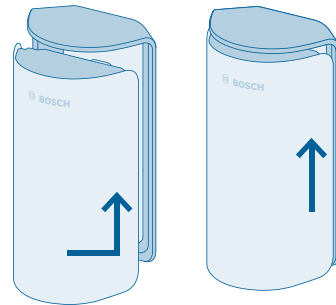


"Click"

## 7.0 FUNCTIONAL TEST

 Once installed, the product's functionality needs to be checked. Start the functional test via the app. Cross the room in order to test the detection range. The Motion Detector will flash red every time it detects movement.



When crossing the room, pay attention to the route that a trespasser would be most likely to take.

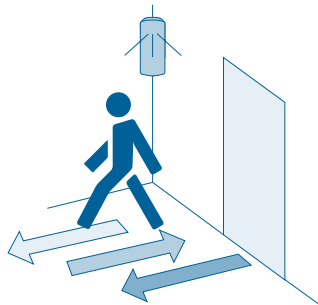

## 8.0 PRODUCT DETAILS

### 8.1 Technical data

Model	Motion Detector
Batteries	123A
Battery life	Up to 5 years <sup>1)</sup>
Radio frequency	2.4 GHz
Max. transmission power	10 dBm
Protocol	Based on ZigBee HA1.1 with extended encryption technology

<sup>1)</sup> 5 years, based on typical storage temperature (-10 to 55°C), ambient temperature, 160 motion detections/day and 2 software renewals of the device/year. High temperatures over 50 °C shorten the lifetime.

Radio range in free-field conditions	> 50 m
Protection class	IP20
Ambient temperature	0 °C to +50 °C
Humidity (non-condensing)	0% to 93%
Housing dimensions (W × H × D)	60 mm × 108 mm × 42 mm
Weight (including battery compartment)	114 g
Detection range	90° and 12 m
Lense	7 × 11
Mounting height	2.20 m × 2.70 m

## 8.2 Declaration of conformity

Robert Bosch Smart Home GmbH hereby declares that the Bosch Smart Home Motion Detector radio communication unit complies with Directive 1999/5/EC and is designed for use in all countries of the European Union.

The declaration of conformity and declaration of performance can be downloaded from **[www.bosch-smarthome.com](http://www.bosch-smarthome.com)**.



### 8.3 Faults in radio operation

Faults in radio operation (e.g. due to electric motors or defective electrical devices) cannot be ruled out. The radio range inside buildings may differ greatly from the radio range in free-field conditions. Apart from the

transmission power and the receiver characteristics, environmental influences such as humidity and structural characteristics may also influence radio operation.

### 8.4 Environmental protection and disposal

Electrical and electronic equipment that is no longer usable and defective or used batteries must be separated from other waste and recycled in an environmentally friendly manner (European Directive on waste electrical and electronic equipment).

To dispose of electrical and electronic equipment or batteries, use your country-specific return and collection systems.



## 9.0 FURTHER INFORMATION

You can find more detailed information on operating and maintaining the Motion Detector in the online FAQs at **[www.bosch-smarthome.com/faq](http://www.bosch-smarthome.com/faq)**

You will also find all contact details on the rear side of this document.



### Sale and transfer

Before you transfer or sell your device, delete your personal information. To do this, reset the device to its factory settings (see online FAQs).

#BeSmarter

## INTERCONNECTED SMART HOME PRODUCTS

Save on heating costs, protect your valuables, create mood lighting and much more: Bosch Smart Home offers a complete, intelligent system to make your life more comfortable, safer and more sustainable.

More at [www.bosch-smarthome.com](http://www.bosch-smarthome.com)



Door/Window Contact



Smoke Detector



Plug



🏠 Robert Bosch Smart Home GmbH  
Schockenriedstraße 17  
70565 Stuttgart, Germany

☎ 00800 8437 6278 (free for UK)  
Mon–Fri 7:00 am–8:00 pm  
Sat 8:00 am–6:00 pm

✉ [service@bosch-smarthome.com](mailto:service@bosch-smarthome.com)



**BOSCH**

**EN Important information for your Bosch Smart Home!**

Robert Bosch Smart Home GmbH declares that this Bosch Smart Home wireless radio equipment is in compliance with the Directive 1999/5/EC (until 12th of June 2017) and Directive 2014/53/EU (from 13th of June 2017). The full text of the EU declaration of conformity is available at the following internet address:

[www.bosch-smarthome.com/uk/en/EU-declarations-of-conformity](http://www.bosch-smarthome.com/uk/en/EU-declarations-of-conformity)

**DE Wichtige Zusatzinformationen zu Ihrer Bedienungsanleitung!**

Hiermit erklärt die Robert Bosch Smart Home GmbH, dass dieser Bosch Smart Home Funkanlagentyp der Richtlinie 1999/5/EG (bis 12. Juni 2017) und der Richtlinie 2014/53/EU (ab 13. Juni 2017) entspricht. Der vollständige Text der EU-Konformitätserklärung ist unter der folgenden Internetadresse verfügbar:

[www.bosch-smarthome.com/de/de/CE-Konformitaetserklaerungen](http://www.bosch-smarthome.com/de/de/CE-Konformitaetserklaerungen)

**FR Informations complémentaires importantes pour vos notices d'utilisation!**

Par la présente Robert Bosch Smart Home GmbH, déclare que cet équipement radioélectrique Bosch Smart Home est conforme à la directive 1999/5/CE (jusqu'au 12 juin 2017) et à la Directive 2014/53/UE (à partir du 13 juin 2017). Le texte complet de la déclaration UE de conformité est disponible à l'adresse internet suivante :

[www.bosch-smarthome.com/fr/fr/UE-declarations-de-conformite](http://www.bosch-smarthome.com/fr/fr/UE-declarations-de-conformite)



Robert Bosch Smart Home GmbH  
Schockenriedstraße 17  
70565 Stuttgart, Germany



00800 8437 6278 (toll-free AT, DE, FR, UK)



service@bosch-smarthome.com  
www.bosch-smarthome.com

8-750-000-332 V001



**BOSCH**