

## Open-Source-Software

This Bosch Smart Home product uses open-source software. This Bosch Smart Home product uses open-source software. The license information for the components is as follows.

**core\_cm3.h** Copyright (C) 2009-2013 ARM Limited. All rights reserved. Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- ▶ Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
- ▶ Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
- ▶ Neither the name of ARM nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission. This software is provided by the copyright holders and contributors „as is“ and any express or implied warranties, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose are disclaimed. In no event shall the copyright owner or contributors be liable for any direct, indirect, incidental, special, exemplary, or consequential damages (including, but not limited to, procurement of substitute goods or services; loss of use, data, or profits; or business interruption) however caused and on any theory of liability, whether in contract, strict liability, or tort (including negligence or otherwise) arising in any way out of the use of this software, even if advised of the possibility of such damage.

## Safety instructions

- ▶ Take the batteries out of the device if it is not used for a prolonged period of time.
- ▶ The enclosed batteries are not suitable for charging.
- ▶ Do not modify the product in any way. Any other use is considered unintended use. We will not assume liability for any resulting damage.
- ▶ The product may only be used indoors with Bosch Smart Home original components and recommended partner products. Avoid dust, moisture, vibrations, constant sun or other sources of heat radiation, cold and mechanical stress.
- ▶ When choosing a fixing location and when drilling, pay attention to potential electrical lines and/or supply lines that could be behind the wall.

## Declaration of conformity

Robert Bosch Smart Home GmbH declares that this Bosch Smart Home wireless radio equipment is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address:

**[www.bosch-smarthome.com/  
EU-declarations-of-conformity](http://www.bosch-smarthome.com/EU-declarations-of-conformity)**



## Environmental protection and disposal

Electrical and electronic equipment that is no longer usable and defective or used batteries must be separated from other waste and recycled in an environmentally friendly manner (European Direc-

tive on waste electrical and electronic equipment). To dispose of electrical and electronic equipment or batteries, use your country-specific return and collection systems.

## Technical data

<b>Model</b>	Universal switch
<b>Article number</b>	8-750-000-378
<b>Batteries</b>	2x 1,5 V LR03/Micro/AAA
<b>Radio frequency</b>	868,3 MHz / 869,525 MHz
<b>Max. transmission power</b>	10 mW
<b>Radio range in free-field conditions</b>	up to 100 m
<b>Protection class</b>	IP20
<b>Ambient temperature</b>	+5 °C to +35 °C





**BOSCH**

LET'S GET  
STARTED




# Universal Switch Flex

Quick start guide



# LET'S GET STARTED

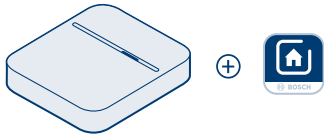


## 1. Install Smart Home Controller

If not yet installed: Download the Bosch Smart Home app and install the Bosch Smart Home Controller.

## 2. Start Smart Home App

Start the app and select "Add device". Follow the instructions in the app.

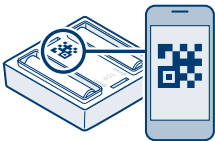

### 3. Scan the QR code

The app will prompt you to scan the QR code on the product. The QR code is on the back of the switch.



### 4. Activate device

Pull the contact lug to activate the device.




## 5. Insert switch

Insert the switch in the tray until you hear it click into place. The „TOP“ label and arrow on the back of the switch must point upwards.

### Service instructions

- ▶ If you have any questions, please contact our freephone service hotline on:  
**00800 8437 6278**
- ▶ You can find more detailed information on operating and maintaining the product in the online FAQs at:  
**[www.bosch-smarthome.com/faq](http://www.bosch-smarthome.com/faq)**

 Robert Bosch Smart Home GmbH  
Schockenriedstraße 17  
70565 Stuttgart-Vaihingen

 00800 8437 6278 (free for UK)  
Mon-Fri 7:00 am - 8:00 pm  
Sat 8:00 am - 6:00 pm

 [service@bosch-smarthome.com](mailto:service@bosch-smarthome.com)